

Thule Rapid System Kit 1044

> Instructions

MG ZR, 3-dr Hatchback, 02-05





MG ZR, 5-dr Hatchback, 02-05

ROVER 25, 3-dr Hatchback, 00-03, 04-05



ROVER 25, 5-dr Hatchback, 00-03, 04-05

ROVER 200, 3-dr Hatchback, 96-99


ROVER 200, 5-dr Hatchback, 96-99

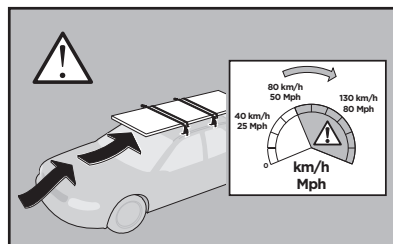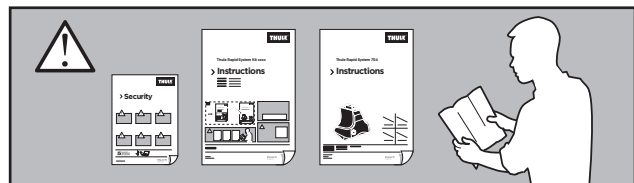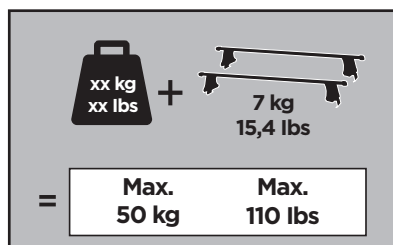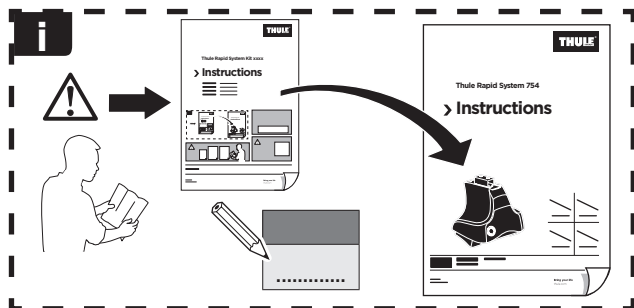

ISO 11154-E

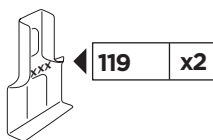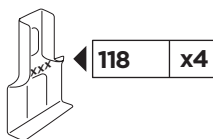



x1



x1



1

	X (scale)	X (mm)	X (inch)
MG ZR , 3-dr Hatchback, 02-05	25	901	35 1/2
MG ZR , 5-dr Hatchback, 02-05	25	901	35 1/2
ROVER 25 , 3-dr Hatchback, 00-03, 04-05	25	901	35 1/2
ROVER 25 , 5-dr Hatchback, 00-03, 04-05	25	901	35 1/2
ROVER 200 , 3-dr Hatchback, 96-99	25	901	35 1/2
ROVER 200 , 5-dr Hatchback, 96-99	25	901	35 1/2

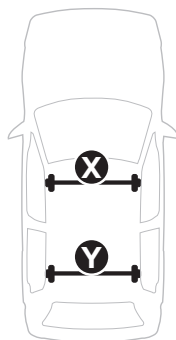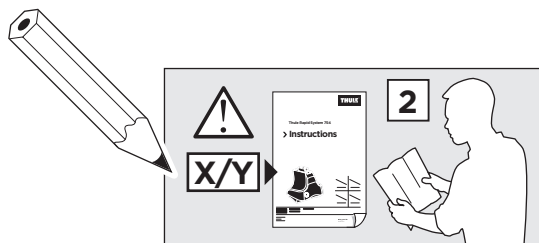

	Y (scale)	Y (mm)	Y (inch)
MG ZR , 3-dr Hatchback, 02-05	23	881	34 5/8
MG ZR , 5-dr Hatchback, 02-05	22,5	876	34 1/2
ROVER 25 , 3-dr Hatchback, 00-03, 04-05	23	881	34 5/8
ROVER 25 , 5-dr Hatchback, 00-03, 04-05	22,5	876	34 1/2
ROVER 200 , 3-dr Hatchback, 96-99	23	881	34 5/8
ROVER 200 , 5-dr Hatchback, 96-99	22,5	876	34 1/2


2

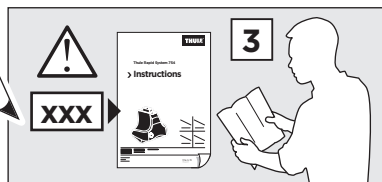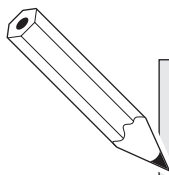

MG ZR, 3-dr Hatchback, 02-05

ROVER 25, 3-dr Hatchback, 00-03, 04-05


ROVER 200, 3-dr Hatchback, 96-99

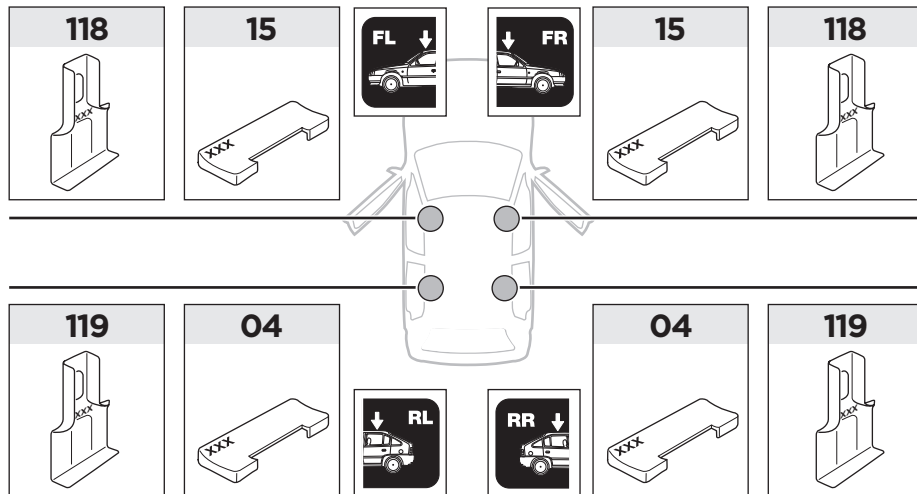


MG ZR, 5-dr Hatchback, 02-05

ROVER 25, 5-dr Hatchback, 00-03, 04-05

ROVER 200, 5-dr Hatchback, 96-99

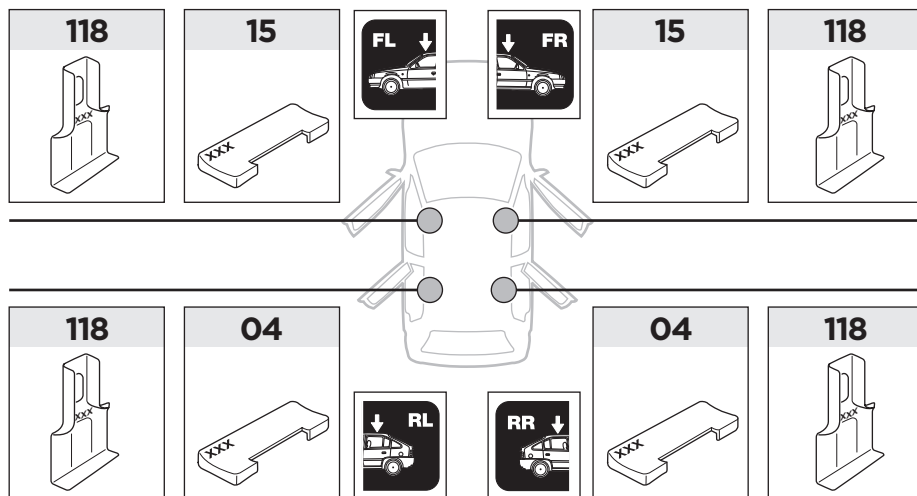

3


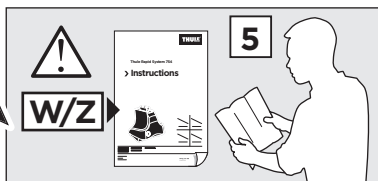


	W (mm)	Z (mm)	W (inch)	Z (inch)
MG ZR , 3-dr Hatchback, 02-05	220	650	8 ⁵/₈	25 ⁵/₈
MG ZR , 5-dr Hatchback, 02-05	220	650	8 ⁵/₈	25 ⁵/₈
ROVER 25 , 3-dr Hatchback, 00-03, 04-05	220	650	8 ⁵/₈	25 ⁵/₈
ROVER 25 , 5-dr Hatchback, 00-03, 04-05	220	650	8 ⁵/₈	25 ⁵/₈
ROVER 200 , 3-dr Hatchback, 96-99	220	650	8 ⁵/₈	25 ⁵/₈
ROVER 200 , 5-dr Hatchback, 96-99	220	650	8 ⁵/₈	25 ⁵/₈

MG ZR, 3-dr Hatchback, 02-05

ROVER 25, 3-dr Hatchback, 00-03, 04-05

ROVER 200, 3-dr Hatchback, 96-99

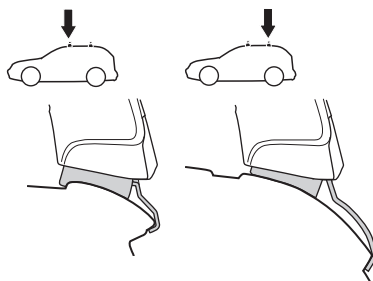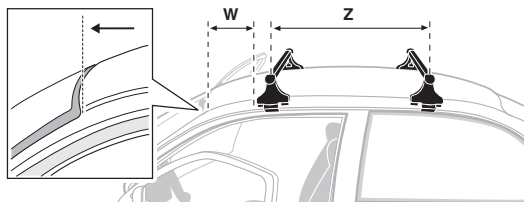

MG ZR, 5-dr Hatchback, 02-05

ROVER 25, 5-dr Hatchback, 00-03, 04-05

ROVER 200, 5-dr Hatchback, 96-99

